
MINCOM Computer

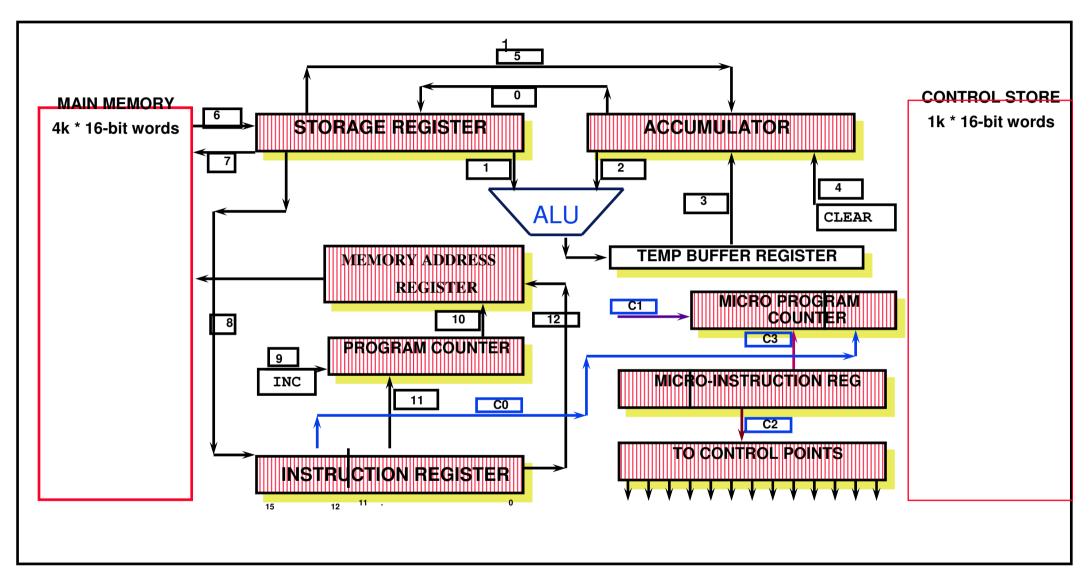

Mirco Instruction Opcodes

1 X X	Activate control points specified in bits 0-12
0 0 0	Branch to address specified by op-code
0 0 1	Branch if Accumulator = 0 to address specified by bits 0-9
0 1 0	Branch if Accumulator < 0 to address specified by bits 0-9
0 1 1	Branch unconditionally to address specified by bits 0-9